

 


S1 Table

15.6" Portable Monitor

USER GUIDE

www.arzopa.com

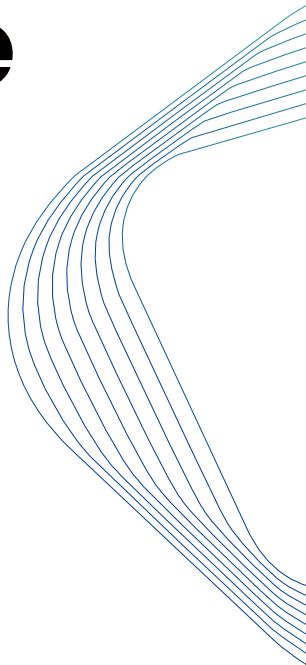

Tech Support

If you meet any question in using this monitor, feel free to contact us for quick response and professional tech support.



Official Website



Facebook



Official Website
www.arzopa.com



Facebook
[@Arzopatech](https://www.facebook.com/Arzopatech)



Tech Support
support@arzopa.com
24/7 service




[@arzopa](https://twitter.com/arzopa)


Contents

Package Contents	1
Monitor Introduction	2
Connect Monitor with Devices	3
Duplicate & Extend Mode Setting	7
Screen Rotate Setting	8
OSD Function Introduction	9
Monitor Standing Positions	13
Specifications	14
Supported Devices & Models	15
Common Problems and Solutions	17
Notices	18

 
Package Contents

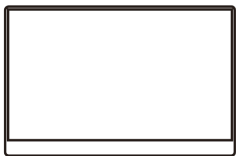

Monitor x 1

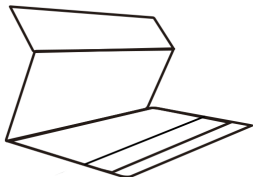 


Smart Cover x 1

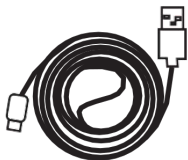 

Type-C to USB-A
Cable x 1



 Type-C to Type-c
Cable x 1

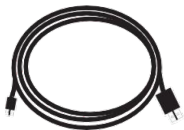


Mini HDMI to HDMI
Cable x 1



Charger x 1

 Monitor Introduction

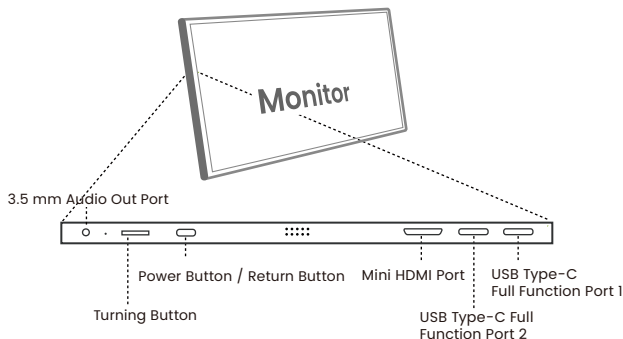

Mini HDMI Port : Receives audio/video signals

USB Type-C Function Port1/Port2 : USB C 3.1 support reversible insertion and reverse charging.

Compatible with USB PD2.0 power supply; supports 5V /9V /12V /15V /20V input

Power/Return Button : Press and hold ~3 seconds to turn on/off the monitor.

Turning Button :

- OSD Menu: Press to enter OSD menu.
- UP/DOWN turning switch: Push up/down to move up/down in the menus. When in a menu, press Turning Button to select menu item.
- Brightness/Volume Adjustment: When not on a menu, push the Turning Button UP once for the Brightness quick-access. Or push the Turning Button DOWN once for the Volume quick-access.

3.5 mm Audio Out Port :

 
To connect to 3.5 mm-compatible external audio device.

Connect Monitor with Devices

1. Connection Condition

This monitor does not have a built-in battery. Before connecting the monitor, please make sure it has enough power (5V/2.4A or above) comes in firstly.


2. LAPTOP (With Type-C)

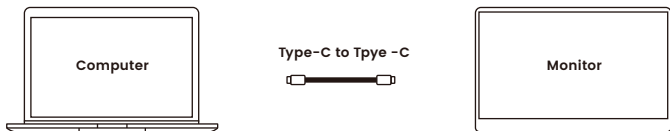


Note: If you want to adjust the brightness and volume above 80%, please make sure the external power supply of 5V/2.4A or above be connected.

Note: Not all laptops with a Type-C port can work with ARZOPA monitor. Please check the Type-C port of your laptop if it supports audio and video signal transmission.

 3. PC / Laptop (With HDMI Port)

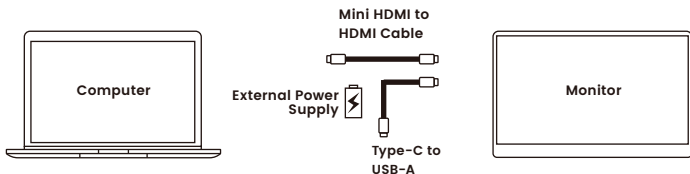


OR

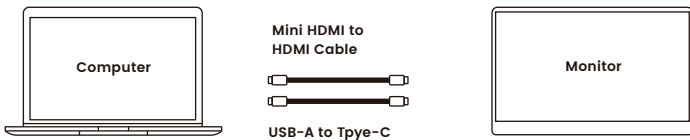 

Note: HDMI port does not support power transmission. It is a must to connect an extra power supply (5V/2.4A or above) if you use mini HDMI port connection.

 4. PHONE (With Tpye-C)

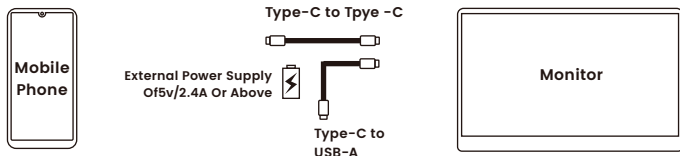

When there is no external power supply, the cell phone will supply power to the monitor.

(Energy-saving mode is activated, brightness will be automatically adjusted to 30%)

 
When the external power supply is connected, the cell phone will also be charged through the external power supply.

(To ensure the monitor and the phone can get enough working current, please use at least 16W charger or power bank as the external power supply.)

Note: Only works directly with cell phone through full-featured Type-C port.

For iPhone: need a lightning to HDMI adaptor.

5. Other Devices

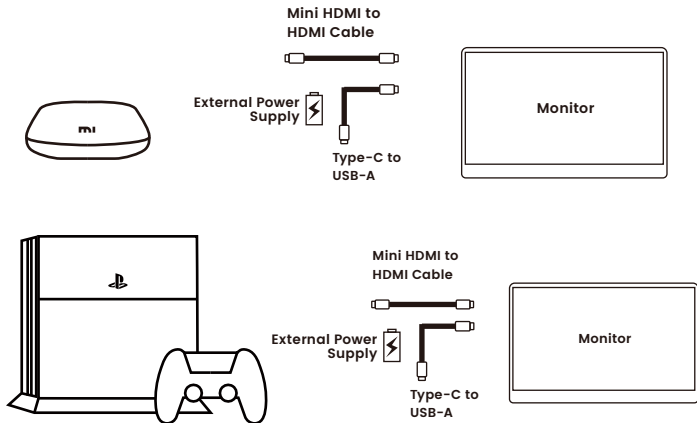


Note: Please connect the power supply cable first and then Mini HDMI to HDMI Cable to ensure the smooth transmission of signals. When connecting the switch device, 30W or above is required for the power adapte

Duplicate & Extend Mode Setting

1. Connect your ARZOPA monitor to a power outlet and an available port on your PC.
2. Right-click the desktop and select either screen resolution (Windows 7/8) or display settings (Windows 10).
3. Click the multiple displays drop-down list, and then select extend these displays, or duplicate these displays, note if you cannot see the additional monitor(s) listed, click detect. If does not work, try restarting your computer and do steps again.

Change the appearance of your displays

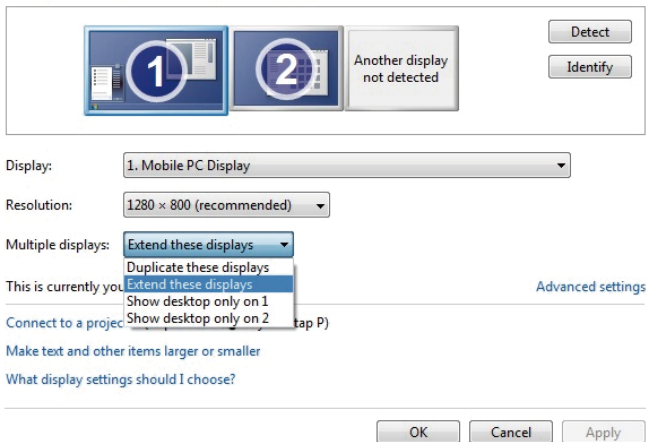

The screenshot shows the Windows 'Change the appearance of your displays' window. At the top, there are two monitor icons labeled 1 and 2. Monitor 1 is active and shows a desktop with a taskbar. Monitor 2 is labeled 'Another display not detected'. To the right of the monitors are 'Detect' and 'Identify' buttons. Below the monitors, the 'Display:' dropdown is set to '1. Mobile PC Display'. The 'Resolution:' dropdown is set to '1280 x 800 (recommended)'. The 'Multiple displays:' dropdown is open, showing options: 'Extend these displays' (selected), 'Duplicate these displays', 'Show desktop only on 1', and 'Show desktop only on 2'. Below this, the text 'This is currently your primary display' is visible. To the right of the dropdown menu is a link for 'Advanced settings'. At the bottom, there are 'OK', 'Cancel', and 'Apply' buttons.

Display: 1. Mobile PC Display

Resolution: 1280 x 800 (recommended)

Multiple displays: **Extend these displays**

This is currently your primary display

Advanced settings

Connect to a projector (tap P)

Make text and other items larger or smaller

 
What display settings should I choose?

OK Cancel Apply


Screen Rotate Setting

1. Connect your ARZOPA monitor to a power outlet and an available port on your PC.
2. Right-click the desktop and select either screen resolution (Windows 7/8) or display setting (Windows 10).
3. Click the orientation drop-down list, and then select Landscape or portrait screen.

Note: If you cannot see the option of orientation on your laptop/PC, please check if your laptop/PC has this function.

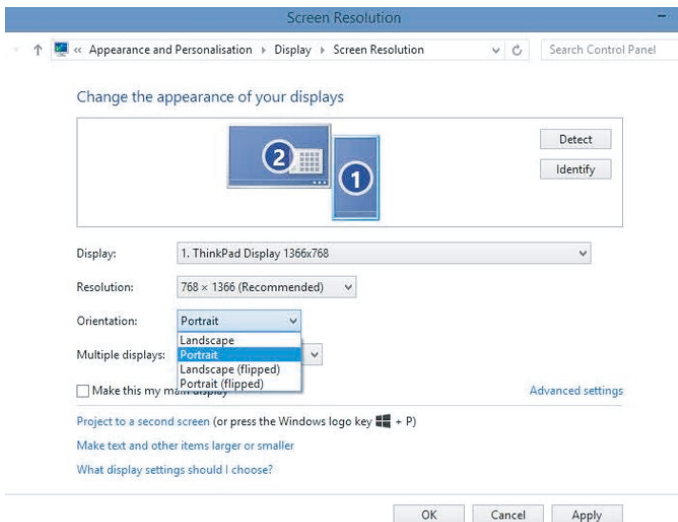

OSD Function Introduction

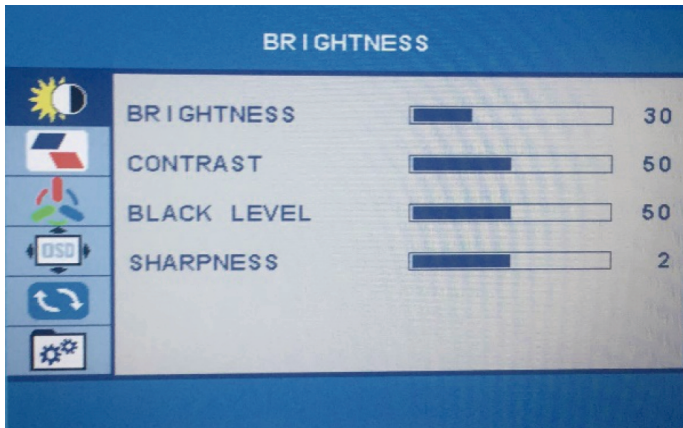 

1. Press the Roll Key to activate the OSD menu
2. Scroll the Roll Key up and down to choose your settings
3. Press Roll Key to confirm
4. Press Power Button to return to the previous previous page



Brightness	Brightness	The adjusting range is from 0 to 100.
	Contrast	The adjusting range is from 0 to 100.
	Black Level	The adjusting range is from 0 to 100.
	Sharpness	The adjusting range is from 0 to 100.
Image	ECO	Contains Six modes(Standard/ Game/Movie/Text/FPS/RTS Modes).
	DCR	Select ON or OFF to enable or disable dynamic contrast ratio function.
	Aspect	Adjusts the aspect ratio to 4:3/16:9.

Color Temp	Color Temp	Contains two preset color modes (Cool, Warm) and User Mode.
	Red	The adjusting range is from 0 to 100.
	Green	The adjusting range is from 0 to 100.
	Blue	The adjusting range is from 0 to 100.
Setting	Language	Select OSD language. The selections are: English, French, German, Simplified Chinese, Italian, Spanish, Portuguese, Turkish, Polish, Netherlands, Japanese, Korean.
	OSD Timer	The adjusting range is from 0 to 100.
	Transparency	The adjusting range is from 0 to 100.

Reset	Reset	Selects RESET to revert all settings to the factory default mode.
	MUTE	Select ON or OFF to.
	Volume	The adjusting range is from 0 to 100.
Color Temp	Signal Source	Contains two signal sources Type-C and HDMI.
	Low Blue Light	The adjusting range is from 0 to 100. (0/25/50/75/100)
	HDR MODE	Select ON or OFF to open HDR mode.

Monitor Standing Positions

  You can stand up the monitor by different positions with the smart cover.

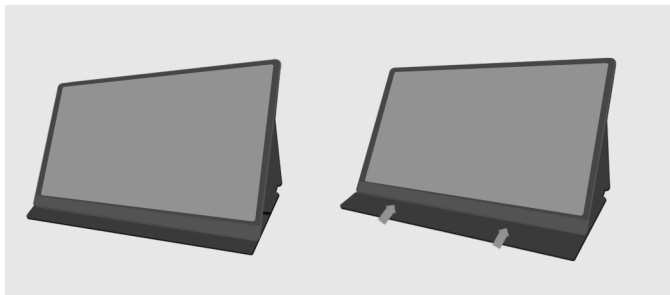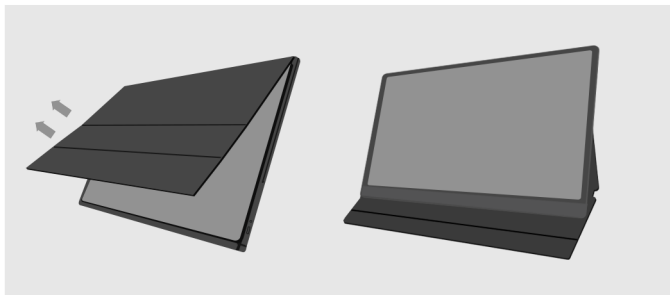

Specifications

Product Name: ARZOPA Type-C Portable Monitor

Screen Size: 15.6 Inch

Panel Type: IPS

Aspect Ratio: 16:9

Resolution: 1920*1080

Display Color: 16.7M

Color Temperature: 6800K

Visual Angle: H: 85°/85°Min V: 85°/85°Min

Contrast Ratio: 1000:1

Brightness: 300cd/m²

Color Gamut: 72%

Input Interface: Mini HD (Video Signal),

Type-C Full Function (Video Data, Power Supply ISDN),

Output Interface: 3.5mm Headphone Interface

Speaker: Built-in Speakers (1W*2)

Refresh Rate: 60Hz

***Specifications are subject to change without notice.**

Supported Devices & Models

1. Phone

Brand	Model
HUAWEI	P20 / P20 RS / P20 Pro / P30 / P30 Pro / Mate 10 / 10 Pro 20 / 20 X / 20 Pro / 30 / 30 Pro / RS /V20 /Note 10
SAMSUNG	DEX /S8 / S8+ / S9 / S9+ / S10 / S10+ / S20 / Note 8 Note 9 / Note 10 / Note 10+ (Connecting Samsung need extra power supply)
Razer	Razer Phone / Razer Phone 2
OnePlus	OnePlus 7 / OnePlus 7 Pro / OnePlus 7T
Sony	Xperia 1 / Xperia 5 / Xperia XZ3
NOKIA	NOKIA 9 Pure / View. ASUS: ROG / ROG2.
HONOR	Note 10, V20 /30 Series
HTC	U Ultra
OPPO	R17 Pro /Reno /Find. LG: G5 /G6 /G7
More	To be updated. Compatible with Switch / XBOX / PS3 / PS4 / PS5 etc.

2. Laptop

Brand	Model
Apple	MacBook 12in /2016 /2017 Pro MacBook Air 2018 iPad Pro 2018-2020
HUAWEI	MateBook D / MateBook E / MateBook X MateBook X Pro / MateBook 13/MateBook 14 /MagicBook
Microsoft	SurfaceGo / Surface Book 2
ASUS	ZenBook 3 / ZenBook 3 Pro / ZenBook X / U4100 U4100UN / AU5100UQ /G3 /G5 /G7 /Inspiron 5000 Inspiron 7000 / XPS13 /XPS15
MI	Mi Air 12.5 / Air 13.3 / Pro 15.6 / Pro 15.6 GTX
Lenovo	Y7000 / Y7000P / Y900K / YOGA 6 PRO ThinkPad X1 / Carbon / MIIX 720 /Yoga 5 Pro
DELL	G3 / G5 / G7 / Inspiron 5000 / Inspiron 7000 / XPS13 XPS15 / Latitude 5285 /Latitude 3520
Google	Pixelbook /PielBook Pen
Razer	Blade Stealth / Blade Pro
Nvidia	Geforce RTX 2070 / Geforce RTX 2080 Geforce RTX 2080Ti
More	To be updated. Compatible with most PCs or Laptops.

Common Problems and Solutions

Q1: Shows "no signal" after a certain period of time.

1. Check if the wires are loose, re-plug them and make sure they are connected correctly;
2. Replace the cable with a new one and see if the same thing happens
3. If you have tried all of the above and the problem is not resolved, please contact our after-sales email.

Q2: Why do I have to plug in two cords if I don't have a USB-C port on my laptop?

A: The USB-C to USB-C cord is strong enough to communicate power and transmission signal through one cord . If you can't use the USB-C to USB-C cord, it must to use the HDMI cord along with the USB-A to USB-C cord, one for transmission and one for power.

Q3: My monitor won't power on.

A: If you are not using a USB-C cord , make sure your monitor is connected to your laptop with both the HDMI cord and the USB-A to USB-C. Then, press and hold the on/off button to power up the monitor.

Q4: The screen flicker black when displaying content.

A: Please check if the connection is loose, if there is no problem with the connection, it may be due to insufficient power supply, please connect the adapter and use it again, or replace the power adapter or data cable with a new one.

Notices

- Before setting up this Type-C Portable Display, carefully read all the documentation that came with the package.
- To prevent fire or shock hazard, never expose this Type-C Portable Display to rain or moisture.
- Never try to open this Type-C Portable Display cabinet.
- Before using this Type-C Portable Display, make sure all cables are correctly connected and the power cables are not damaged. If you
- Avoid dust, humidity, and temperature extremes. Do not place this Type-C Portable Display in any area where it may become wet. Place this Type-C Portable Display on a stable surface.
- Never push objects or spill liquid of any kind into the slots on this Type-C Portable Display cabinet.
- If you encounter technical problems with this Type-C Portable Display, contact our tech support (support@arzopa.com) immediately.



ARZOPA



E-mail: support@arzopa.com